

Sage 930i Communications Test Set

Option Menu Sorted by Number

1	Modify Dial Ring	34	Select Reports	67	<i>not used</i>
2	Send Digit Sequences	35	Dual Tone Sender	68	<i>not used</i>
3	Remote Control	36	PVIT	69	Far 23 Tone Responder
4	Digit Receiver	37	Line Status	70	23 Tone Director
5	Ring Load	38	<i>not used</i>	71	23 Tones Test
6	DC Volt/Amp Meter	39	Remote Audio	72	<i>not used</i>
7	Supervision Thresholds	40	Send PCM Alarms	73	<i>not used</i>
8	<i>not used</i>	41	Read E1 Voltage	74	<i>not used</i>
9	Wink Timing	42	E1 Wander	75	Remote Upgrade
10	Frequency Sweep	43	E1 Error Counters	76	<i>not used</i>
11	Impulse Noise & Hits	44	E1 Error History	77	<i>not used</i>
12	Wink Margining	45	E1 Error Inject	78	<i>not used</i>
13	Phase & Ampl Jitter	46	E1 Bit Error Rate	79	<i>not used</i>
14	Set Time and Date	47	<i>not used</i>	80	Keyboard Lock Out
15	Beep on Error?	48	<i>not used</i>	81	<i>not used</i>
16	Digit Receiver Timeout	49	<i>not used</i>	82	<i>not used</i>
17	Envelope Delay	50	<i>not used</i>	83	<i>not used</i>
18	P/AR Measurement	51	<i>not used</i>	84	Echo Generator
19	4-Tone Intermodulation	52	PSQM Director	85	Echo Generator Test Line
20	30 Bit Display	53	Far PSQM Responder	86	<i>not used</i>
21	Toggle A/B Bits	54	<i>not used</i>	87	TPT Burst Length
22	Absolute Delay	55	Fractional E1 BERT	88	<i>not used</i>
23	Send Signaling State	56	64-KBIT E1 BERT	89	Printer Handshake
24	Post TPT Delay	57	DS-0 Loopback	90	<i>not used</i>
25	Far End Responder	58	<i>not used</i>	91	Software Version
26	ROTL/Responder	59	Echo Canceller Disable	92	Reset 930i
27	ROTL Interrogator	60	Hum Filter	93	Test Display
28	Echo Sounder	61	<i>not used</i>	94	List Options
29	Call 102 Line	62	Group Delay	95	Dry Circuit
30	Adjust TLP	63	PCM Error History	96	<i>not used</i>
31	Send Hook Flash	64	<i>not used</i>	97	Hold Control
32	Dial-Up Testline	65	ATME Far End Responder	98	<i>not used</i>
33	Dial-Up Sweep	66	ATME Director	99	<i>not used</i>

Sage 930i Communications Test Set

Option Menu Sorted by Name

19	4-Tone Intermodulation	42	E1 Wander	89	Printer Handshake
70	23 Tone Director	59	Echo Canceller Disable	52	PSQM Director
71	23 Tones Test	84	Echo Generator	36	PVIT
20	30 Bit Display	85	EGEN Test Line	41	Read E1 Voltage
56	64-Kbit E1 BERT	28	Echo Sounder	39	Remote Audio
22	Absolute Delay	17	Envelope Delay	3	Remote Control
30	Adjust TLP	69	Far 23 Tone Responder	75	Remote Upgrade
66	ATME Director	25	Far End Responder	92	Reset 930i
65	ATME Far End Responder	53	Far PSQM Responder	5	Ring Load
15	Beep on Error?	55	Fractional E1 BERT	27	ROTL Interrogator
29	Call 102 Line	10	Frequency Sweep	26	ROTL/Responder
6	DC Volt/Amp Meter	62	Group Delay	34	Select Reports
33	Dial-Up Sweep	97	Hold Control	2	Send Digit Sequences
32	Dial-Up Testline	60	Hum Filter	31	Send Hook Flash
4	Digit Receiver	11	Impulse Noise & Hits	40	Send PCM Alarms
16	Digit Receiver Timeout	80	Keyboard Lock Out	23	Send Signaling State
95	Dry Circuit	37	Line Status	14	Set Time and Date
57	DS-0 Loopback	94	List Options	91	Software Version
35	Dual Tone Sender	1	Modify Dial Ring	7	Supervision Thresholds
46	E1 Bit Error Rate	18	P/AR Measurement	93	Test Display
43	E1 Error Counters	63	PCM Error History	21	Toggle A/B Bits
44	E1 Error History	13	Phase & Ampl Jitter	87	TPT Burst Length
45	E1 Error Inject	24	Post TPT Delay	12	Wink Margining
				9	Wink Timing

To **access** an option menu, press the Option Menu function key.

- Use the numeric keypad to enter the option number, and then press ENT (or any soft key)
- OR -
- Use the arrow keys to scroll to the desired option, and then press ENT (or any soft key).

To **exit** an option menu, press the Option Menu function key repeatedly until you exit the function.